




Installing Nikon Coolpix 3500 front cover


Tools used in this guide

- [Phillips #00 Screwdriver](#)
- [Spudger](#)

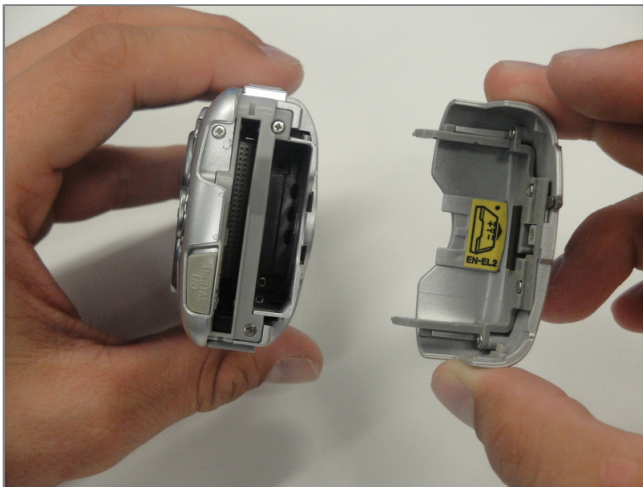


Step 1 - Battery

- Open the battery cover
- Remove the battery
- Gently remove the cover

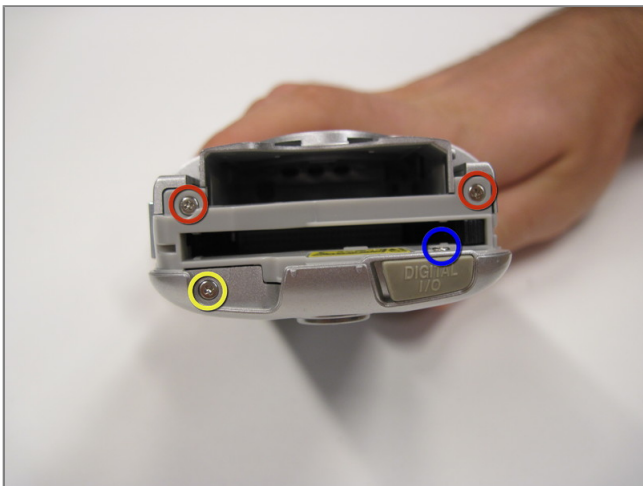

Step 2 - front cover

- Remove two 4.5 mm screws next to the battery opening
- Remove one 3 mm screw above the CF Card opening
- Remove one 4.5 mm screw next to CF card opening

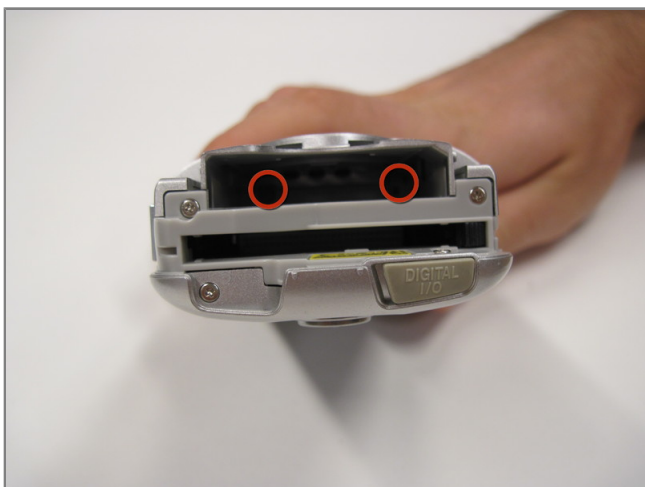

Step 3

- Remove two 4.5 mm screws from inside the battery slot



Step 4

- Remove two 5 mm screws from the end opposite to the battery




Step 5

- Remove the newly revealed 5 mm screw and plastic cap



Step 6

- Remove the five identical 3.5 mm screws from the bottom of the camera
- Remove the grey plastic piece that was held in place with the five screws by gently prying the faceplate up (Note: do not pull hard, there are two wires connecting the faceplate to the logic board)

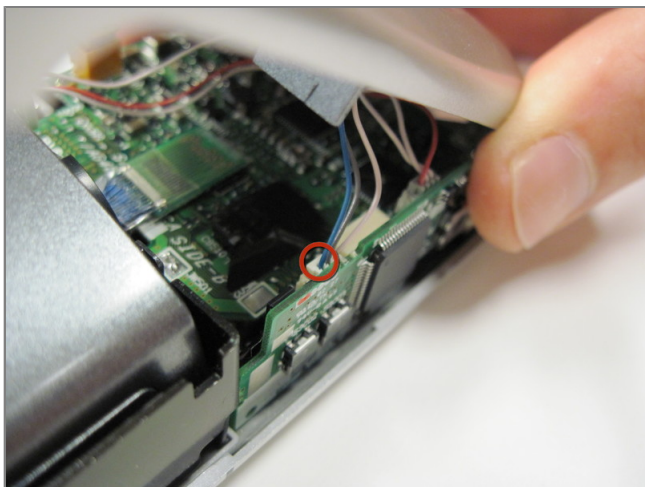

Step 7

- Use the spudger to lift up the white-capped wire and set the faceplate aside
- Next, use a spudger, lift up the orange-capped wire at the bottom of the camera

